

# THE BUTLER SERIES



## OWNER'S INSTRUCTIONS

WHIRLPOOL TOP MOUNT REFRIGERATOR 200-299L/300-399L/400-499L

Before operating the unit, please read this manual  
thoroughly and retain for future reference



# CONTENTS

- 1. The Butler Professional Series**
- 3. Installation**
- 5. Operating**
- 7. Maintenance**
- 10. Storage Tips**
- 12. Troubleshooting**
- 13. FAQs**
- 15. Technical Specifications**
- 17. Ice Mate**
- 18. Thaw Zone**
- 19. Waiter Go**
- 21. Flat Stack**
- 22. Drinks Plus Zone**
- 24. More Innovations**

# THE BUTLER SERIES

Dear Homemaker,

Congratulations on bringing home your new Whirlpool® appliance!

I would like to welcome you to a very special family of Whirlpool® homemakers from around the world, who believe that happiness begins at home and that their families deserve nothing but the best.

With its 100 years of expertise, Whirlpool® brings to consumers, across the globe, products that are designed to meet their specific needs.

Whirlpool® makes life easier for homemakers, helping them to create happier homes. For Whirlpool®, this is more than just a task as everything we do enables us in building lifelong relationships with our consumers. In our centenary year, we pledge to create many more happy homes by delivering products of outstanding performance, design, quality and sustainability.

Do go through this easy-to-read guide and follow the instructions to get the best out of your appliance. If you have any further queries simply call the Whirlpool® After Sales Service number. We wish you many years of happiness and look forward to a lasting relationship.

Yours sincerely,

Whirlpool® Oceania



# SAFETY PRECAUTIONS



**⚠ DANGER**

**⚠ WARNING**

## **⚠ WARNING**

### **Suffocation Hazard**

Remove doors from your old refrigerator.  
Failure to do so can result in death  
or brain damage.

## **Your safety and the safety of others is very important**

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

This is the safety alert symbol.

This symbol alerts you to hazards that can hurt you and others.

All safety messages will be preceded by the safety alert symbol and the word “DANGER” or “WARNING”

These words mean:

**DANGER** – You will be seriously injured if you don’t follow instructions.

**WARNING** – You can be seriously injured if you don’t follow instructions.

All safety messages will identify the hazard, tell you how to reduce the chance of injury and what can happen if the instructions are not followed.

## **Proper disposal of your Old Refrigerator is Important**

Child entrapment or suffocation are not the problems of the past. Abandoned refrigerators are dangerous even if they are left unattended

for a few days. If you are getting rid of your old refrigerator, please follow these instructions to prevent accidents.

Before you throw away your old refrigerator or freezer

→ Take out the doors

→ Leave the shelves in place so that children don’t climb inside easily

# INSTALLATION

## Steps for installation of The Butler Series (Alfred & Niles ranges):

**Step 1:** Remove the outer carton. Inspect the refrigerator to make sure it has arrived safely at your home. In case you find any transit damage to your refrigerator, report to your dealer within 24 hours of delivery.

**Step 2:** After you unpack the refrigerator, select a well-ventilated spot close to an electrical point. Allow sufficient clearance for dispersion of heat, preferably 6 inches (150 mm) at the back, on the sides and top.

**Step 3:** You can shift the refrigerator by raising the front slightly and sliding it on the rear castors.

**Step 4:** Rotate the two front levellers, provided below your refrigerator, clockwise to raise the front and anticlockwise to lower it (refer fig.1a). The front should be slightly above the rear so that the door shuts gently when left open.

## Things to keep in mind:

- Keep the refrigerator away from direct sunlight and other high temperature sources like oven and cooking range
- Avoid damp, exposed locations
- Avoid carpeted areas. A stable installation minimizes noise and prevents tilting
- This appliance is not intended for use by person (including children) with reduced physical, memory or mental capabilities lack of experience & knowledge unless they have been given supervision or introduction concerning use of appliance by a person responsible for the safety
- Children should be supervised to insure that they do not play with the appliance
- This appliance is not designed for use in vehicles or on board ships or aircraft, additional requirements may be necessary
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard

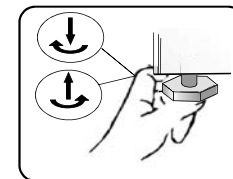


Fig. 1a

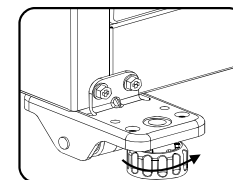


Fig. 1


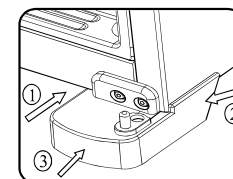



Fig. 3

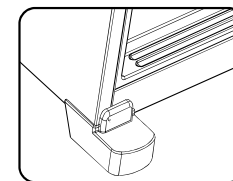

# INSTALLATION

<b>⚠ WARNING</b>

<b>Electric Shock Hazard</b>
<ul style="list-style-type: none"><li>■ Do not remove ground prong.</li><li>■ Do not use an adapter.</li><li>■ Do not use an extension cord.</li><li>■ Failure to follow these instructions can result in death, fire or electrical shock.</li></ul>

## Getting Connected

Plug the cord of the refrigerator into a 3 prong grounded outlet.

Adjust the cooling settings (refer pages 4 & 5 for instructions).

Ensure that the electrical point is properly earthed. Avoid extension cords.

Run refrigerator for 2-3 hours so that it is cooled sufficiently before keeping food inside.

**Note :** It is advisable to get your refrigerator installed by an authorised Whirlpool® Service Representative

# OPERATING


## For models without electronic user interface

### Temperature Control

To control the temperature of your refrigerator, turn the knob according to your requirement. This control is provided inside the refrigerator section. Turn knob to the left to reduce the cooling and to the right to increase the cooling. It is preset to the middle position.

POSITION	USAGE CONDITION
Low (1-2)	During winter conditions or when there is not much food stored in the refrigerator.
Mid (3-4)	This is the default & recommended setting. Can be used in normal usage.
High (5-6)	During summers or when there is a lot of food stored in the refrigerator.
Quick Chill* (7-8)	During extreme summers or when you want faster cooling.

\*Quick chill mode setting to be monitored after every 12 hours to avoid freezing of food, drinks ,bottle cracking, etc.

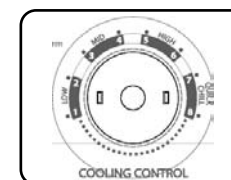



### Air Flow Control

The Air Flow Control in the freezer controls the distribution of cold air between the refrigerator compartment and freezer compartment. Turn knob to the left for 'Normal Ice' and to the right for 'Fast Ice' setting. It is preset to the middle position as shown in the picture for uniform cooling in freezer and refrigerator compartments.

KNOB POSITIONS	USAGE CONDITION
Normal	For normal ice in freezer and strong cooling in your refrigerator compartment.
Max Freeze	For quick ice in your freezer compartment

For even cooling in both the refrigerator compartment and freezer compartment, set the air flow knob in mid position.

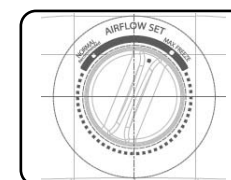

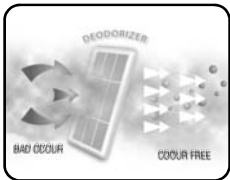

## Replacement of Activ Deo with TimeStrip


- Activ Deo should ideally be replaced every 6 months
- Snap out the Activ Deo cover
- Replace Activ Deo strip (available with Whirlpool® After Sales Service) with a new one
- Press and snap back the cover
- Please contact Whirlpool® After Sales Service for replacement
- The Timestrip provided along with the product indicates the time for replacing the product
- To activate the Timestrip, simply squeeze the bubble on the front  
A line in the indicator window will start colouring
- Replace Activ Deo when the Timestrip indicator turns Black/Red

## Replacing the LED/bulb\* Illumination Panels

- Please contact Whirlpool® After Sales Service for replacement.

## Removal of Door bin

- The new door bins has been designed for easy removability
- Hold the door bin at corners with both the hands and  
slide the bin upward and pull it outward (a)
- To replace the door bin insert the bin along the door liner till it fits into perfect position (b)

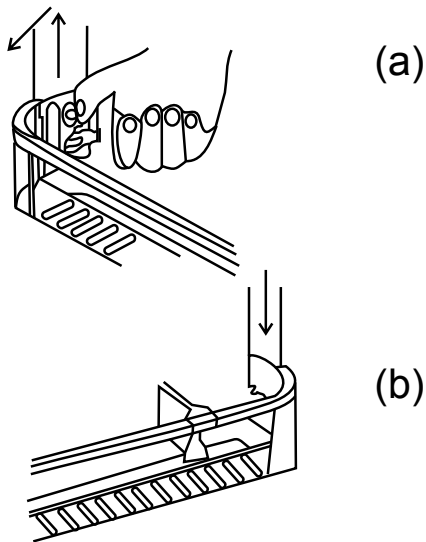


## Cleaning your Whirlpool Refrigerator

Before cleaning, always switch-off the power supply and remove the plug from the socket.

- Remove all food items from the refrigerator
- Remove all shelves and bins. To remove refrigerator shelves, push them up gently from the rear of the shelf and then pull out
- Tilt the chiller downwards and pull out gently
- Remove the refrigerator and freezer door bins by pushing up and pulling out
- Hold the vegetable crisper using the handle, raise the front slightly and pull out
- Use a soft cloth and mild detergent to clean the refrigerator thoroughly. Take care not to damage the door seals
- Allow the refrigerator to dry by leaving the door open for some time
- Dry the parts and place them back in the refrigerator
- Plug the power cord in and switch the mains on. Allow the refrigerator to cool for some time before placing food inside

### Caution

- Do not splash water directly on the refrigerator
- Do not work with flammable sprays or solvent based cleaners
- Be sure to check the voltage before inserting the power supply cord into the socket
- Be sure not to re-insert the power supply socket within 5 minutes of removing it from the socket
- Ensure that the water does not get into the light bulb socket or other electrical components of your refrigerator

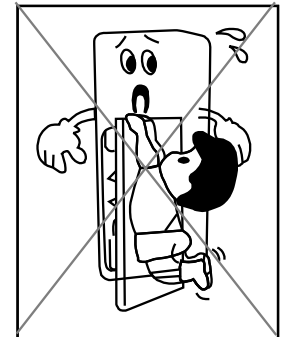


# MAINTENANCE

- Don't allow water to collect at the bottom of the refrigerator
- This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given instruction concerning use of the appliance by a person responsible for their safety children should be supervised to ensure that they do not play with the appliance
- Do not store volatile chemicals such as ether and benzene in the refrigerator  
The fumes, besides damaging food, can build up and cause an explosion

## Tips

- Apply a good silicon or wax polish on the outside of your refrigerator to keep it looking new for an extended period of time

## Steps for removal of the Chiller Tray and Glass Shelves

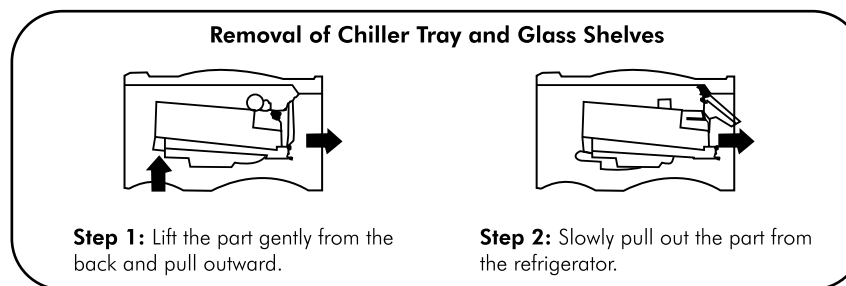

## Going on Vacation

### Short Vacation

During an average short length vacation, it is usually best to leave the refrigerator and freezer in regular operation

## Long Vacation

For a vacation of extended duration, perform the following steps:

- Remove all food items from the refrigerator and freezer
- Switch-off the mains and disconnect the power cord from the socket
- Use a soft, damp cloth to wipe the refrigerator clean from the inside and outside
- Leave both doors open to prevent odour

## Moving your Refrigerator

Switch-off the mains and disconnect the power cord from socket.

- Remove all food items from the refrigerator and freezer
- Use a soft, damp cloth to wipe the refrigerator from the inside and outside
- Fasten the doors and interior components using tape to prevent them from moving/opening during transportation
- Lift the refrigerator slightly from the front and slide using castors at the rear

## Replacing the burnt out bulb

Disconnect refrigerator - Switch off the power supply and remove the plug from the socket.

- Transparent cover - Locate the transparent cover on the control box
- Remove the transparent cover - Press the transparent cover at the centre and pull downwards
- Remove the burnt out bulb - Turn the bulb in the anti-clockwise direction to unscrew
- Replace the new bulb - Replace the burnt out bulb with a new bulb of the same rating and fasten it in bulb socket by turning it clockwise
- Install transparent cover and restart - Put the lens back in position, plug the power cord in the mains and switch on

**Note:** Your Whirlpool refrigerator uses packaging made from eco-friendly recycled paper.



# STORAGE TIPS

## Storage tips to keep your food fresh for Longer

### Meat

Your Whirlpool will keep meat as fresh for months together as the day you put them in. You should always wrap meat completely and tightly in plastic bags, foil or cling wrap. Unwrapped meat quickly loses its moisture and nutrients, and causes your refrigerator to smell.

Once wrapped, place the meat in the Quick-Freezer to prevent tiny water particles becoming larger ice crystals and damaging the cell structure.

Remove bones and surplus fat from meat. Fat usually becomes rancid, and boneless meat needs roughly half as much freezer space.

Bigger portions of meat must be thawed before cooking. If you have a microwave, you can thaw meat in minutes. If you don't, move the quantity you want to use from the freezer to the top of the vegetable crisper, the night before.

- Allow hot food items to cool before storing
- Store fresh food in the refrigerator compartment
- Cut chicken, meat, fish, vegetables etc. into small pieces before picking them for freezing
- Do not store food items like bananas, which rot easily at low temperature
- Do not re-freeze food after defrosting
- Store liquids in the front of the refrigerator to avoid freezing

### Vegetables

All vegetables should be blanched (quickly dipped in boiling water) before freezing. Blanching destroys enzymes, preserves flavour, texture and vitamin content, and reduces micro-organisms. After blanching, remove the vegetables and plunge them immediately into cold, icy water. Follow these specific tips for the given vegetables to get maximum storage life out of them.



## STORAGE TIPS

- **Beans:** Wash thoroughly, trim ends and then blanch for 2 minutes
- **Capsicum:** Wash and remove all seeds and membranes. Blanch in halves or sliced. Put in a box and freeze. Blanching time - 3 minutes
- **Green Peas:** Shell and blanch in a pan. Shake the pan periodically to heat evenly. Cool, drain and pack - preferably in polybags or containers. Blanching time - 1 minute
- **Tomatoes:** These are best frozen as puree or juice. Skin and core them before storing. Then simmer them in their own juice for 5 minutes. Once they're soft, strain and puree them, pack in polybags or boxes and freeze
- **Large Red Chillies:** Remove the stems, cut them in half and completely de-seed them. Put them in polybags and freeze
- **Coconuts:** Store in a plastic bag, with the shell intact. The coconut milk can be frozen in a container or bottle
- **Carrots:** Cut them in any shape. Blanch in hot water for 1 minute and then dip in ice cold water. Drain in a sieve and pack in a box or polybag, and freeze



### Thawing Fruits & Vegetables

Various fruits should be thawed differently, while vegetables should not be thawed at all. Since vegetables lose most of their nutritive value from thawing, they should instead be sautéed straight from the freezer

# TROUBLESHOOTING

## Electrical Shock Hazard



- ▶ Do not attempt to modify any part of this appliance.
- ▶ Do not connect this appliance to power sources other than specified.
- ▶ If the power cord is damaged, have it replaced by your Whirlpool® Service Centre.
- ▶ Do not use mechanical devices or other means to accelerate the defrosting process.
- ▶ Do not damage the refrigerant circuit.
- ▶ Do not use electrical appliances in the food storage compartments.

PROBLEM	PROBING	SOLUTION
Refrigerator does not work	Is the power cord plugged in the socket	Reconnect the power plug
	Is there a power breakdown	Wait till the power resumes
	Has the circuit breaker tripped	Check through some electrician
Ice formation is slow	Is the air flow knob set to normal ice position	Set your upper compartment knob (Airflow knob) to fast ice mode
Cooling in the refrigerator is not enough	Is your refrigerator compartment knob set to lower value	Rotate the knob to set it to higher value. Refer page 5
	Is your freezer compartment knob set to max freeze	Rotate the knob to set it to 12 o'clock position. Refer page 5
	Is the passage obstructed by food	Reposition the food items kept directly in front of the air duct
	Are the refrigerator doors fully closed	Ensure always doors to be in completely closed position
	Are you storing hot foods in the refrigerator	Do not keep hot utensils in the refrigerator
	Are there any pads or plastic covers on the shelf	Remove all pads or plastic covers to clear the airflow path
Refrigerator runs non stop	Is the cooling level set to high position	Reduce it to lower levels
	Is the door left open for long	Ensure always doors to be in completely closed position
Refrigerator side walls are hot	This is not a problem. The walls heat slightly during normal operation	Please refer to the sticker pasted on side wall
Refrigerator gives a mild shock	Is your house earthing proper	Please get your house wiring checked by some electrician
Refrigerator compartment is smelly	Has the refrigerator not been cleaned recently	Please clean your refrigerator frequently
	Is there an object with strong smell inside	Prevent storing food items which emanates strong smell

**Q. 1 Is moisture in the Vegetable Drawer normal?**

**Ans.** Yes. As the water in the vegetables evaporates, it strikes the cold surface of the refrigerator, hence resulting in formation of water droplets. The humid air over the vegetable is however swept away by the dynamic airflow inside the refrigerator, keeping your vegetables fresh.

**Q. 2 Why do I hear a noise from the back of the refrigerator?**

**Ans.** The refrigerator is kept cold inside with the help of cooling coil, fan motor which is inside the product and the compressor which is fitted at the bottom rear side of the refrigerator. During the operation of the refrigerator it is normal to hear a humming noise.

**Q. 3 Why is there smell emanating from my refrigerator?**

**Ans.** Check if any item which emanates strong smell has been kept unwrapped in the refrigerator. If so, wrap it in polythene or keep it in a closed container. Keeping cut lemon will also help in reducing the odour.

**Q. 4 How much time is required to make ice?**

**Ans.** Depending on the room temperature and the door opening frequency, the ice making in the trays provided could be anywhere between 90 mins to 135 mins. However, depending upon the usage pattern, it can even go higher.

**Q. 5 Why are the sidewalls hot sometimes?**

**Ans.** Sidewalls are warm as a hot gas tube is provided at the side edges of the cabinet. This helps in avoiding moisture formation on the walls when humidity is high.

**Q. 6 Why is there a noise when the Compressor starts?**

**Ans.** It is normal to hear noise when the compressor starts and stops.

# FAQS

**Q. 7 How frequently should I clean my refrigerator?  
Can I use warm water? Can I use detergents?**

**Ans.** It is advisable to clean your refrigerator twice a month. You can clean it with warm water and mild detergents.

**Q. 8 Is the Drinks Plus Zone cooler than the rest of the fridge?**

**Ans.** In the Drinks Plus Zone you have colder temperature than that of the shelves and Vegetable Drawer. This compartment can be used for faster cooling of water, beverages, beer and milk preservation etc. **As a precaution, please do not store bottles for longer duration since it could freeze & burst.**

**Q. 9 Why do vegetables spoil when kept on the refrigerator shelves?**

**Ans.** The zone below the Drinks Plus Zone is not suitable for vegetables. It is recommended to store vegetables in the Vegetable Drawer which has the desired temperature for keeping vegetables fresh.


**Q. 10 Does milk get spoilt when kept in the Vegetable Drawer?**

**Ans.** Milk needs colder temperature for it to remain fresh. Since the vegetable drawer is kept at warmer temperature, milk will get spoilt in it. It is recommended to store milk in the chiller.

**Q. 12 Do I need to clean the back tray of my refrigerator?**

**Ans.** As your product is equipped with frost free mechanism, you need not clean the tray, however in extreme moisture conditions; very seldom you may require to empty the tray.

# TECHNICAL SPECIFICATIONS

Model	WRIBT24**	WRIBT26**	WRIBT29**	WRIBT34**	WRIBT36**	WRIBT41* 	WRIBP41**	WRIBP45**
Gross Capacity (Ltr.)	240	260	290	340	360	410	410	445
WxDxH (mm)	569x 636x1493	569x 636x1587	569x 636x1714	617X670X1675	617X670X1750	700x695x1652	700x695x1652	700x695x1762
Working Voltage Range (V)	230-240	230-240	230-240	230-240	230-240	230-240	230-240	230-240
Gasket Type	Push in	Push in	Push in	Push in	Push in	Push in	Push in	Push in
Controls	Electro-mechanical type (inside cabinet)	Electro-mechanical type (inside cabinet)	Electro-mechanical type (inside cabinet)	Electro-mechanical type (inside cabinet)	Electro-mechanical type (inside cabinet)	Potentiometer type/Electro-mechanical type (inside cabinet)	Potentiometer type/Electro-mechanical type (inside cabinet)	Potentiometer type/Electro-mechanical type (inside cabinet)
<b>Freezer</b>								
Freezer Shelf	Full Glass	Full Glass	Full Glass	Full Glass	Full Glass	Flat Stack	Flat Stack	Flat Stack
No. & type of FC bins	2 full width	2 full width	2 full width	2 full width	2 full width	2 full width	2 full width	2 full width
FC Illumination	NA	NA	NA	NA	NA	LED	LED	LED
<b>Refrigerator</b>								
Tower Cooling	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Chiller	Yes	Yes	Yes	Yes	Yes	Yes	NA	NA
Crisper with Humidity Control	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Magifresh Crisper	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Toughened Glass Shelves	2	3	3	3	3	2	2	2
Deodoriser	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
RC Illumination	Lamp	Lamp	Lamp	Lamp	Lamp	LED	LED	LED
Egg Tray	12 eggs	12 eggs	12 eggs	12 eggs	12 eggs	12 eggs	12 eggs	12 eggs
Bottle Separator	2	2	2	2	2	2	2	2
Bottle Bin	1	1	1	1	1	2	2	2
Multi Utility Bin	NA	NA	NA	1	1	NA	NA	NA
<b>The Butler Series Accessories</b>								
Ice Mate	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Thaw Zone	NA	NA	Yes	Yes	Yes	Yes	Yes	Yes
Waiter Go	NA	NA	Yes	Yes	Yes	Yes	Yes	Yes
Flat Stack	NA	NA	NA	NA	NA	Yes	Yes	Yes
Drinks Plus Zone	NA	NA	NA	NA	NA	NA	Yes	Yes

## THE BUTLER PROFESSIONAL SERIES

# THE BUTLER SERIES



### **The Butler Series, it's as if someone's working behind the scenes.**

Your new Whirlpool Refrigerator has been designed with the greatest care to give you a refrigerator that's perfect for all your needs. Its state-of-the-art technology delivers perfect cooling for all types of food.

Every other feature too, has been thoughtfully created with your specific homemaking needs in mind to bring you a host of wonderful new benefits, and turn homemaking into a truly joyful experience.

# ICE MATE

**I need more room in my freezer!**

**What you said:**

**What we did: Created the Ice Mate\*.**

Simply fill the ice cube tray with water, freeze, twist and you have endless supply of ice. The location of the Ice Mate can be moved around the freezer in Summer and then simply removed during Winter to allow for additional space in your freezer. While handling Ice Mate - hold assembly horizontal by the handle to avoid the ice holder and tray from sliding out.




## Usage

### Ice Tray Frame Removal/Placement

- Hold ice cube tray from front
- Lift ice cube tray up slightly & pull out smoothly
- For placement adjust tray with top rails in lid & slide frame inside smoothly

### Ice Cube Harvesting

- Hold Ice Mate lid using one hand on top as shown
- Twist both the trays to release the ice cubes and they will fall in the collector
- Remove the ice collector & take the ice cubes

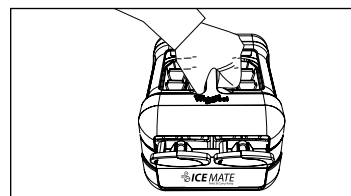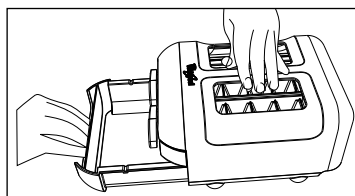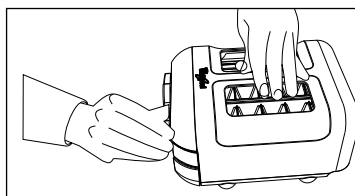

\* Select features in select models



# THAW ZONE



**Defrosting meat is always messy and inconvenient!**

**What you said:**

**What we did: Created the Thaw Zone\*.**

A quick and easy way to hygienically defrost your meat while remaining refrigerated. Treated with an anti-bacterial coating and able to go in the dishwasher, this is a convenient and clean way to defrost meat. Portable and removable makes the Thaw Zone a must for every home.

## **Usage**

→ While removing the tray hold it carefully with two hands as you slide it all the way out to avoid any spillage

## **Cleaning**

→ Rinse Thaw Zone tray in warm water to remove any frozen ice or dried blood then place into the dishwasher for cleaning and reuse as required

\* Select features in select models

# WAITER GO

**I entertain a lot so I need a functional storage solution, especially for drinks!**





**What you said:**

**What we did: Created the Waiter Go\*.**


This ice cold drink storage solution is a convenient way to save multiple trips to the fridge whilst entertaining. Able to store your beer, condiments and breakfast spreads this is a versatile caddy for all homes. Being transportable, it is perfect for outdoor parties and other social activities. The multifunction carry handle also stores a bottle opener. Acting as a space saver it can also be removed when not required to increase fridge space.

## Usage

- Place beer bottles and or sauce bottles into the container. Avoid placing bottles/containers which may not be securely stored as it may tend to fall while carrying
- Add ice cubes if required around the base of the container to keep contents cooler for a longer period
- Put the lid on firmly (from top)

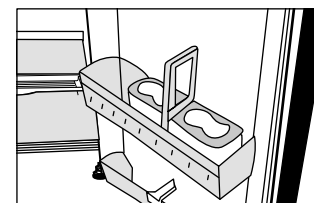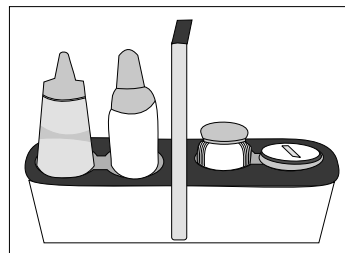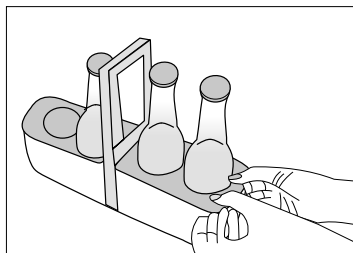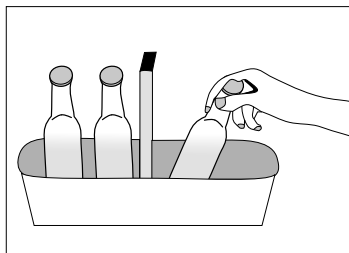

# WAITER GO

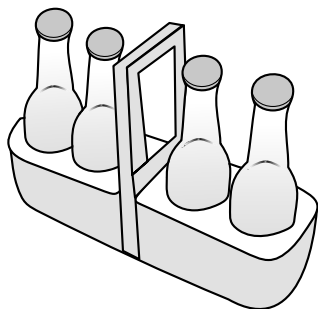




## Assembly & Dismantling for easy cleaning

### Assembly:

- Slide container with lid attached downwards in handle groove
- Push until you hear a locking sound
- Repeat procedure for the other side

### Dismantling:

- Keep Waiter Go assembly on a firm, flat surface
- Push handle from top till you hear a snap sound
- Slide both containers vertically to remove

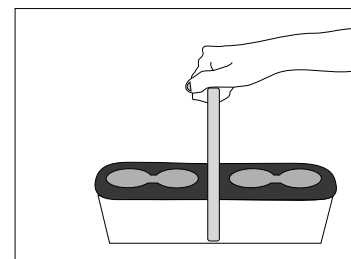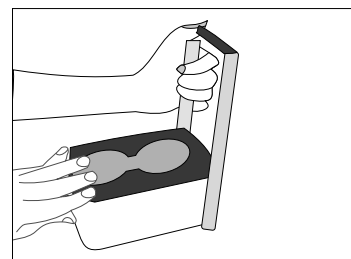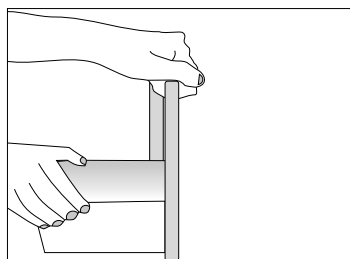

\* Select features in select models

# FLAT STACK

**I need somewhere safe to stack and store delicate items in my freezer!**

**What you said:**

**What we did: Created the Flat Stack\*.**

A dedicated storage area for stacking delicate frozen items such as pastry, pizzas, ice creams, etc. It is a central storage area within the freezer for easy reach of key freezer items prone to damage and wastage. With its robust design it can hold an assortment of frozen foods and offers effective freezer space management. The easy view and storage makes it helpful to organise your frozen foods.

## Usage

- The Flat Stack shelf can be used to centrally store pastry and other items that require special flat storage
- 3 kg of food can be held within the central section of the Flat Stack shelf
- 8 kg of food can be held within the on top of the Flat Stack shelf

## Safety

- Before removing for cleaning it is recommended to unload Flat Stack completely

## Cleaning

Wipe down with a warm damp cloth during everyday use.



\* Select features in select models

# DRINKS PLUS ZONE



**I entertain a lot, it would be great to have a drinks storage dispenser inside my fridge!**

**What you said:**

**What we did: Created the Drinks plus Zone\*.**

The Drinks plus Zone is a convenient dispensing unit that provides storage for chilled drinks. Drinks cascade into the central dispenser serving two chilled drinks each time. The isolated air vents within the compartment trap the cool air making it the coolest zone within the refrigerator.

## **Usage**

### **Loading**

- When loading the Drinks plus Zone, carefully slide out the draw slowly with two hands either side of the dispenser tray
- Lift and tilt the draw in a downwards motion until it locks into position. The draw will fall slightly down and towards you to allow space for loading
- Carefully place drinks/contents into the Drinks plus Zone draw, the slight decline on each side will mean round objects will roll and fall towards the central dispenser tray location
- When loading bottles, ensure to place the bottom/largest end of the bottle against the front section of the draw to ensure safe loading and dispensing
- With two hands slowly and carefully push the draw back up and into it's original position ready for dispensing

### **Bottle Dispensing**

- Push the handle down and pull dispenser tray out to serve two chilled drinks each time
- Push tray in completely until you hear a locking sound. This ensures maximum performance of Drinks plus Zone and avoids undue movement of the drawer during loading

# DRINKS PLUS ZONE

## Cleaning

Before removing the Drinks Plus Zone for cleaning, it is recommended to empty the draw completely. Slide the draw out slowly then gently lift and pull out from the refrigerator. Ensure the Drinks Plus Zone draw is completely dry before putting it back into position.



## Warning

### **⚠ WARNING**

- Do not overload the Drinks plus Zone or stack contents as this will result in the dispenser not working correctly
- Do not attempt to remove the Drinks plus Zone draw from the refrigerator once fully loaded as this may result in injury due to the weight of the load and glass items falling and or breaking
- When the drawer is fully or partially loaded it will be heavy, so be careful when re-loading
- Children should be supervised when using this accessory

\* Select features in select models

## MORE INNOVATIONS



**Discover the joy of superior cooling, and more!**

**I wish my refrigerator had more aesthetically appealing shelves that did not bend under the weight of large utensils.**

**What you said:**

**What we did:**

→ Whirlpool introduced the unique Toughened Glass Shelves\* that looks great

**I want a refrigerator that gives me chilled water and fast ice even in the hottest of summers.**

**What you said:**

**What we did:**

→ Super efficient cooling system is designed to cool quickly even under tropical conditions

→ A powerful compressor makes ice super quick and ensures perfect cooling for all types of food

\* Select features in select models


## MORE INNOVATIONS

**All refrigerators look great when they are new. I want one that looks just as good when it's old.**

**What you said:**

**What we did:**

- A special Blank Coating Paint Process improves corrosion-resistance, hence retaining its good looks for years

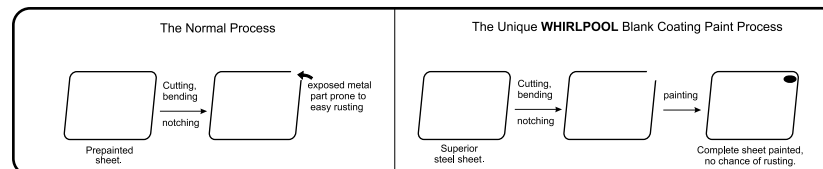

**I want a refrigerator that can easily accommodate fruits, utensils and bottles of just about any shape or size - without much trouble!**

**What you said:**

**What we did:**

Fully adjustable refrigerator door bins give you the flexibility to create larger storage space.

- Adjustable shelves can conveniently accommodate even large utensils.  
More number of shelves that provide maximum flexibility in storage
- The large refrigerator space and extra spacious vegetable crisper allows you to store large supply of fruits and vegetables, and keeps them absolutely fresh
- The unique crisper-separator keeps softer, smaller vegetables like tomatoes, chillies and lemons away from bulkier ones, preventing them from getting squashed\*

\* Select features in select models

# MORE INNOVATIONS



**I want a refrigerator that incorporates internationally accepted standards of technology.**

**What you said:**

**What we did:**

- The advanced No-CFC technology, which is in adherence with the environment preservation guidelines of the International Montreal Protocol, ensures a healthier environment for your family

**Most refrigerator doors aren't wide enough to accommodate large bottles or strong enough to carry much load.**


**What you said:**

**What we did:**

- Extra-deep, solid foam filled tough door carries extra load and provides superior insulation for better cooling. Now you can store large bottles with ease

\* Select features in select models

## MORE INNOVATIONS

PRODUCT CODE	COLOUR	PRODUCT DESCRIPTION	THE BUTLER SERIES 'ALFRED' ACCESSORIES
WRIBT24WA	SNOW	BUTLER 240LT SNOW TOP MOUNT	Ice Mate
WRIBT26WA	SNOW	BUTLER 260LT SNOW TOP MOUNT	Ice Mate
WRIBT29WB	SNOW	BUTLER 290LT SNOW TOP MOUNT	Ice Mate, Thaw Zone, Waiter Go
WRIBT29MB	METALIUM	BUTLER 290LT METALIUM TOP MOUNT	Ice Mate , Thaw Zone, Waiter Go
WRIBT34WB	SNOW	BUTLER 340LT SNOW TOP MOUNT	Ice Mate, Thaw Zone, Waiter Go
WRIBT34MB	METALIUM	BUTLER 340LT METALIUM TOP MOUNT	Ice Mate, Thaw Zone, Waiter Go
WRIBT36WB	SNOW	BUTLER 360LT SNOW TOP MOUNT	Ice Mate, Thaw Zone, Waiter Go
WRIBT36MB	METALIUM	BUTLER 360LT METALIUM TOP MOUNT	Ice Mate, Thaw Zone, Waiter Go
WRIBT41WB 	SNOW	BUTLER 410LT SNOW TOP MOUNT	Ice Mate, Thaw Zone, Waiter Go, Flat Stack
PRODUCT CODE	COLOUR	PRODUCT DESCRIPTION	THE BUTLER PROFESSIONAL 'NILES' ACCESSORIES
WRIBP41WC	SNOW	BUTLER PROFESSIONAL 410LT SNOW TOP MOUNT	Ice Mate, Thaw Zone, Waiter Go, Flat Stack, Drink Plus Zone
WRIBP41MC	METALIUM	BUTLER PROFESSIONAL 410LT METALIUM TOP MOUNT	Ice Mate, Thaw Zone, Waiter Go, Flat Stack, Drink Plus Zone
WRIBP45WC	SNOW	BUTLER PROFESSIONAL 450LT SNOW TOP MOUNT	Ice Mate, Thaw Zone, Waiter Go, Flat Stack, Drink Plus Zone







Let our 100 years of experience do the thinking for you.

**After Sales Service**  
**Australia 1300-363-344**  
**New Zealand 0800-442-584**

[www.whirlpool.com.au](http://www.whirlpool.com.au)

Whirlpool is the registered trademark of The Whirlpool Corporation U.S.A.

W10550471